BY: T. Knox

Date: April 8, 2015



ETR 1017-3

NCRA PROPRIETARY

Page 1 of 2

# **TECHNICAL BULLETIN**

Product Part Number: All Winch Part Numbers with -RW Suffix

**Product Description: Ratchet Winches** 

# **Standard Maintenance Requirements:**

# 1.0 Lubrication:

- a. Add grease every 90 days or as needed to maintain smooth function of the ratchet mechanism.
- b. Use of Shell Gadus S2 V100 grease is recommended. This is a premium bearing grease which is compatible with the original equipment grease and readily available in the U.S. and Canada.
- c. As an option, any compatible, lithium-based low temperature grease may be used.
- d. Do not overfill the ratchet housing with grease.

# 2.0 Grease Fitting:

a. The grease fitting used in the Ratchet Cap requires the use of a special grease gun adapter, p/n PLE05-025 (Parts Plus or equivalent). See Figure 1.



FIGURE 1

_ \		_		
ыv	/ •		Кr	OX
ப		1.	IΝ	IUA.

Date: April 8, 2015



ETR 1017-3

ANCRA PROPRIETARY

Page 2 of 2

### 3.0 Maintenance Tag:

a. All new ANCRA Ratchet Winches (-RW suffix) have a tri-lingual hang tag which defines the recommended maintenance.

**FRONT** 

Hole Punch —

### 0

#### **IMPORTANT**

- Add grease (Shell Gadus S2 V100 is recommended) through the small grease fitting on the outside of the ratchet housing.
- Use a standard grease gun with a needle adapter (PARTS PLUS PLE05-025 OR EQUIV.)
- Re-grease every 90 days or as needed to maintain smooth operation.
- Do not overfill the ratchet housing.

### **IMPORTANT**

- Ajouter graisse (la gamme Shell Gadus S2 V100 est recommandée) par l'entremise du petit raccord graisseur situé à l'extérieur du boitier.
- Utiliser un pistolet graisseur usuel muni d'un adaptateur à aiguilles (PARTS PLUS PLE05-025 OU ÉQUIV.)
- Graisser à nouveau tous les 90 jours ou au besoin afin de préserver le bon fonctionnement.
- Ne pas mettre trop de graisse dans le boitier.

BACK

# 0

#### **IMPORTANTE**

- Agregue grasa (se recomienda Gadus S2 V100 de Shell) a través del pequeño accesorio para engrase que se encuentra en la parte externa de la cubierta del tringuete.
- Use una pistola de engrase con un adaptador de aguja ( PARTS PLUS PLE05-025 O EQUIVA LENTE).
- Reengrase cada 90 días o según se necesite para mantener un correcto funcionamiento.
- No llene en exceso la cubierta del trinquete.



Maintenance Tag Detail- Printed on Orange or Yellow Card Stock

ANCRA CARGO SYSTEMS .2685 CIRCLEPORT DRIVE ERLANGER, KY 41048

Ancra International LLC proprietary rights are included in the information disclosed herein. Recipient, by accepting this document, agrees that neither this document nor the information disclosed herein nor any part thereof shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing, technical or any other purpose except as specifically authorized in writing by Ancra International LLC. Unpublished - all rights reserved under copyright laws.

© 2015 Ancra International LLC